

Tim's Arcade Restoration Web Site

JAMMA Adapter Pinout

Solder Side			Parts Side
Ground (GND)	A	1	Ground (GND)
Ground (GND)	B	2	Ground (GND)
+5v	C	3	+5v
+5v	D	4	+5v
-5v	E	5	-5v
+12v	F	6	+12V
KEY (Blank)	H	7	KEY (Blank)
Coin Counter #2	J	8	Coin Counter #1
Coin Lockout	K	9	Coin Lockout
Speaker (-)	L	10	Speaker (+)
- Not Connected -	M	11	- Not Connected -
Video Green	N	12	Video Red
Video Sync	P	13	Video Blue
Service Switch	R	14	Video Ground (GND)
Tilt/Slam Switch	S	15	Test Switch
Coin Switch #2	T	16	Coin Switch #1
Player 2 - Start	U	17	Player 1 - Start
Player 2 - Up	V	18	Player 1 - Up
Player 2 - Down	W	19	Player 1 - Down
Player 2 - Left	X	20	Player 1 - Left
Player 2 - Right	Y	21	Player 1 - Right
Player 2 - Button 1	Z	22	Player 1 - Button 1
Player 2 - Button 2	a	23	Player 1 - Button 2
Player 2 - Button 3	b	24	Player 1 - Button 3
Player 2 - Button 4	c	25	Player 1 - Button 4
Player 2 - Button 5	d	26	Player 1 - Button 5
Ground (GND)	e	27	Ground (GND)
Ground (GND)	f	28	Ground (GND)